



For stairs with intermediate landings, turns or curves



Fits closely to railing or wall to provide maximum space on the stairs



Optional power features and a choice of seat styles



Handicare 4000 Curved Stairlift

TWIN RAIL SYSTEM

If you're like most people you want to stay in your home as you age. And why not? You love your home and all its memories. Don't move out because of stairs! The Handicare 4000 stairlift makes it easy to eliminate the barrier of stairs. Your custom stairlift is designed with our industry-leading photo measuring system – including the option to see how it will look on your stairs before you buy it.

If your stairs feature a change in direction, pie-shaped stairs, or you would like to add out-of-the-way parking for your stairlift, the Handicare 4000 can be an ideal solution for you. The installation can be completed in about a day by your local installer. Built for reliability and safety, Handicare stairlifts are brought to you by Savaria, a global leader in accessibility products.



Handicare 4000 Curved Stairlift | Twin Rail System

a lift for every lifestyle

Comfort, style and fit matter. That's why we have a selection of seat options to complement your home design and your mobility needs. See our seat measurements document for detailed measurements including adjustable height, width, depth and armrest spacing.



SIMPLICITY ●

A classic look with an easy-to-clean leatherette finish (in sand) and manual fold-up seat, armrests, footrest and swivel.



STYLE ●

A polished design (in vanilla) that's built for comfort. Perfect to pair with power swivel and power footrest options.



SMART ● ● ●

An endless array of options and upgrades to satisfy all needs and personal tastes.

PERCH ● ● ●

Ideal for those with knee or hip problems, the raised seat and reduced seat depth allow you to ride slightly standing.



OUTDOOR ●

Specialized UV-protected upholstery (in slate) provides longevity outdoors without fading or cracking.



color options

SEAT COLORS (SMART, PERCH)



Cocoa



Sand



Slate

STANDARD RAIL COLORS



Black



Brown



Light Gray

Custom rail colors

available at additional charge

power up convenience upgrades

POWER SEAT SWIVEL

With a simple toggle of a switch, the seat turns so you're safely facing the top landing and not the staircase when getting up from the lift.

POWER FOLDING FOOTREST

Choose the powered footrest to eliminate bending down to fold and unfold the footrest.

POWER FOLDING HINGE

If you have an open area or doorway at the base of the stairs, the power hinge keeps the area free and clear of tripping hazards. *Shown at the right.*



see before you buy


HOME ASSESSMENT

Your local authorized dealer will conduct a home assessment that includes precision photo measuring with our unique PS4D system to ensure a perfect fit. Our leading edge system shows you in 3D how the stairlift will look on your staircase – before you place your order!



FABRICATION AND INSTALLATION

Our engineers create a computer-aided drawing for custom fabrication in our North American factory. The standard capacity stairlift features fewer floor stanchions than other curved stairlifts for a sleeker appearance. Installation by your local dealer takes a few hours to a full day.

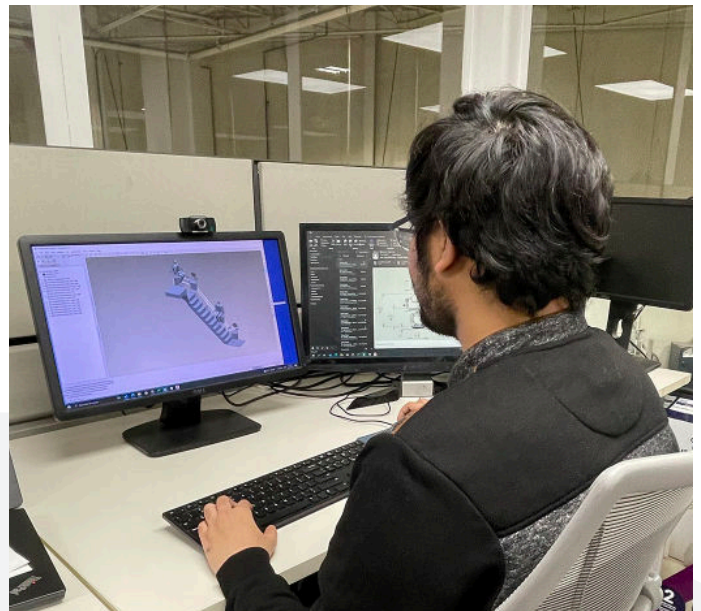

more features

TWIN RAIL

The design of the double rail system creates a close fit to the wall or side railing, leaving maximum space on the stairs. Turns and parking features are also tightly curved for a less intrusive appearance.

SAFETY COUNTS

The Handicare 4000 includes a retractable seatbelt, overspeed brake and obstruction sensor system on the footrest and carriage.

BATTERY POWERED

With charging stations at the top and bottom landing, your stairlift is always powered and will make several trips up and down during a power outage.

OPERATION EASE

The armrest toggles are easy to use, along with two remote controls so you can call the lift from the top or bottom of the stairs.

PARKING OPTIONS

Add a parking station to keep your stairlift out of the way when not in use. *Shown at the right.*



Handicare 4000 Curved Stairlift

TWIN RAIL SYSTEM

OPTIONS

The Handicare 4000 stairlift offers a choice of three standard rail colours: light gray, brown or black.

Choose the seat that is right for you using the seat measurements chart, or by consulting with your authorized dealer. The Smart seat offers additional width space between the armrests and a taller backrest. The footrest to seat height can also be customized to suit your needs.

Your stairlift is custom designed to your staircase and additional parking features may be added for convenience.

Power options include a power seat swivel, power folding footrest and power folding hinge for the bottom landing rail.

SPECIFICATIONS

Applications	Residential, commercial ¹ , indoor, outdoor ²
Capacity	300 lb (136 kg) optional 350 lb (160 kg)
Nominal Speed	23 ft/min (0.12 m/s), 12 ft/min (0.06 m/s) through curves
Drive	Rack and pinion
Motor	0.6 hp, 24V (DC) power that charges on standard household power
Fold-up depth ³	16" (405 mm)
Fold-out depth ³	27.4" (695 mm)
Range of incline	0° to 56°
Warranty	24 months parts and limited lifetime on rail and powertrain ⁴

¹ commercial applications available only in the USA

² outdoor application available for moderate climates

³ at level landing (typical dimensions)

⁴ see dealer for complete details



To locate a dealer near you, call us
1.888.637.8155

handicareusa.com | handicare.ca

Handicare is a division of Savaria Corporation

Savaria is a global leader in accessibility. We design and manufacture reliable commercial accessibility elevators, home elevators, wheelchair lifts and Handicare stairlifts. With in-house engineering and an extensive network of authorized dealers around the world, all of our products are made with the goal of helping people move – whether that's to overcome mobility challenges or to simply make life easier.

Authorized dealer:



 savaria

savaria.com

2 Walker Drive Brampton ON L6T 5E1 Canada

Savaria makes every effort to publish accurate information. Specifications and options are subject to change without notice. © 2023 Savaria Corporation.